

USER GUIDE

ROLL UP STAND



TE-2AE




TE-2AL




TE-1H




TE-1R-4

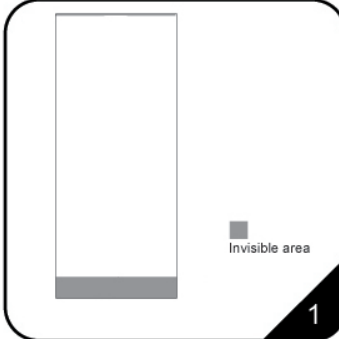


1. Prepare appropriate size printing

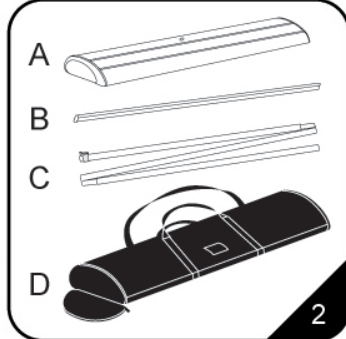

2. The case should contain:
Installation instruction
A. a base unit B. top snap bar
C. 3-piece pole D. black bag (optional)

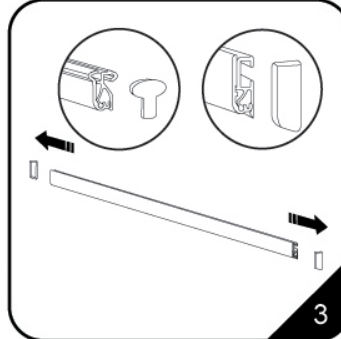


3. Remove the plastic end caps from the top snap bar. There are two kinds of snap bar, changed according to different items.

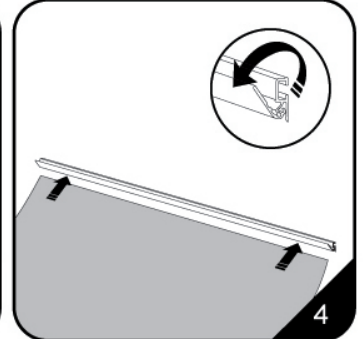


4. Open the snap bar then insert the top edge of the graphic.


! The graphic thickness should be 0.2mm~ 0.4mm. Double layers for thin material.

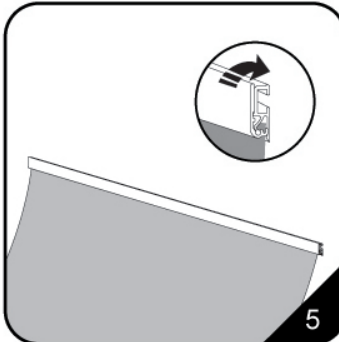


5. Close the snap bar lips to secure the graphic.

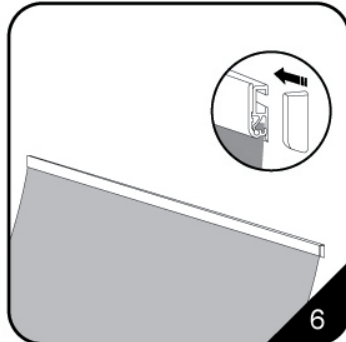


6. Finish the top by re-attaching the plastic end caps.

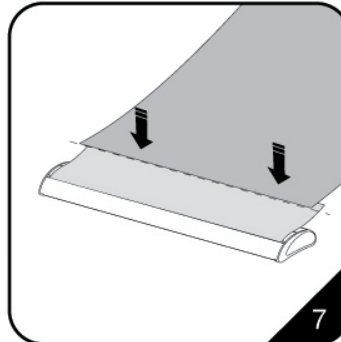


7. Peel off the adhesive paper along the edge of the base's leader roll and attach the bottom of the banner. Make sure the banner is straight.

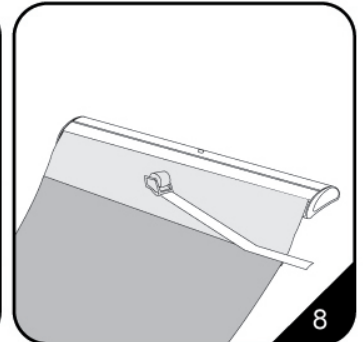


8. Secure the banner to the leader with a transparent adhesive tape at least 4cm wide both sides.

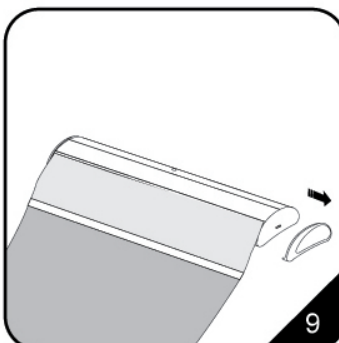


9. Peel off the cover of the right side.

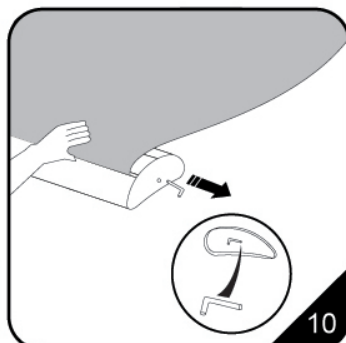


10. Activate the spring tension by removing the Allen Key. Pull the Allen Key while holding on to the attached graphic. Save the key in the side cover.

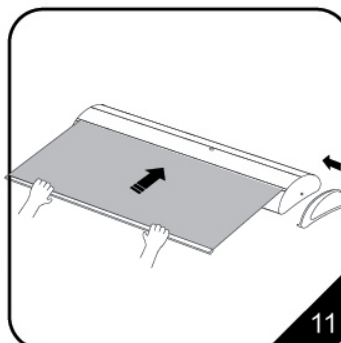


11. Carefully allow the graphic to recoil into the base unit, then reattach the chrome covers.

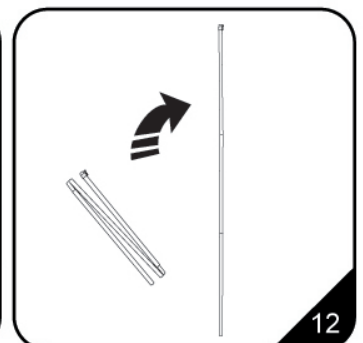


12. The hooked end corresponds to the top and the round end belongs to the bottom base.

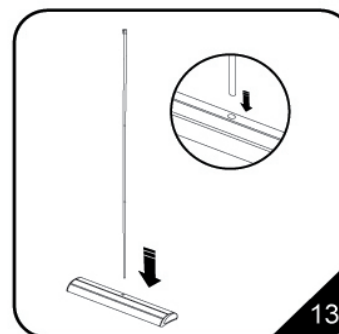


13. Insert the assembled pole into the base hole.

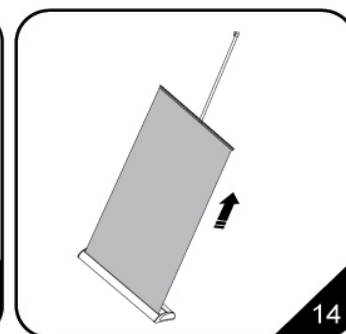

14. Pull the graphic completely.

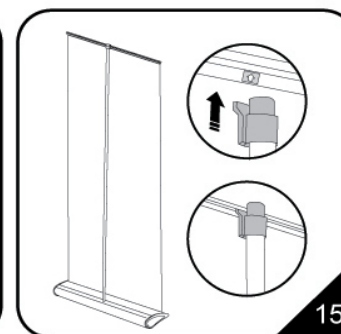

15. The plastic holder at the top of pole slips into the rear slot of the banner beam. A marker on the beam indicates the beam's centre where the pole should be inserted.

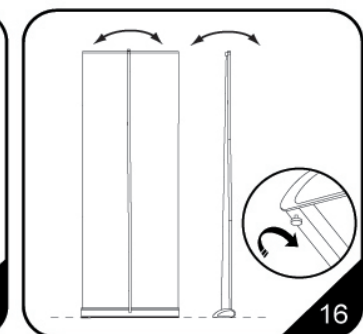

16. The unit can be leveled by adjusting the threaded plastic feet at the bottom of the base unit.