
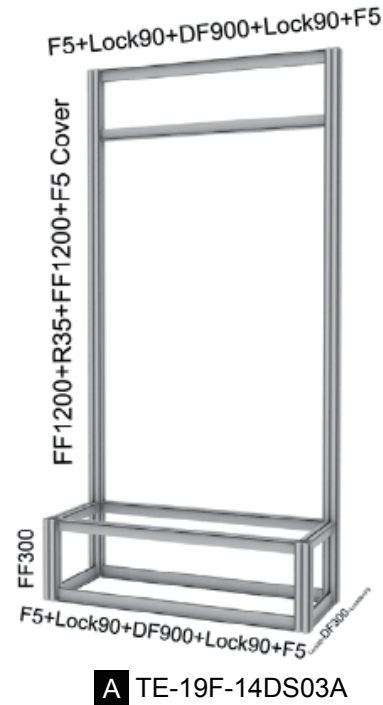


TE-19F-14DS03 USER GUIDE

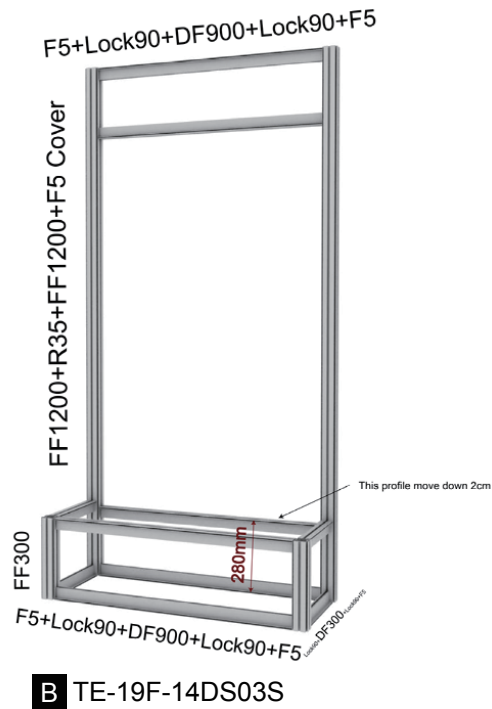

1 F5 Profile Connector

Note: Screws on the vertical frame should not be on the same line with slat wall panels

2 & 4 D4/F5 Profile Connector

Step 1

Step 2

done

4 way

5 Printing Installation

* Four corner frist

6 Shelf Installation

Step 1

Step 2

Step 3

3/A AL. Slat Wall

Top

Front

Back

3/B Pvc Slat Wall

Note: Do not let "L7" interference screws with "F5".

Note: The direction of slot board

step1:
From top to bottom, inserted "L7" under.

step2:
From top to bottom, inserted slat wall under.

step3:
With D4 stuck slat wall